BTH-300-R6L0 Zello iOS
BTH-300-R6 Zello Android
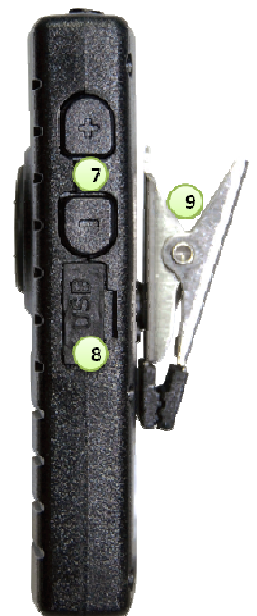# Manual

1 Microphone
2 3.5mm earphone jack
3 Power and Pairing button

4 LED Indicator
5 Phone answering/
   hang-up button

6 PTT button

7 Volume control buttons
8 USB jack
9 Clip
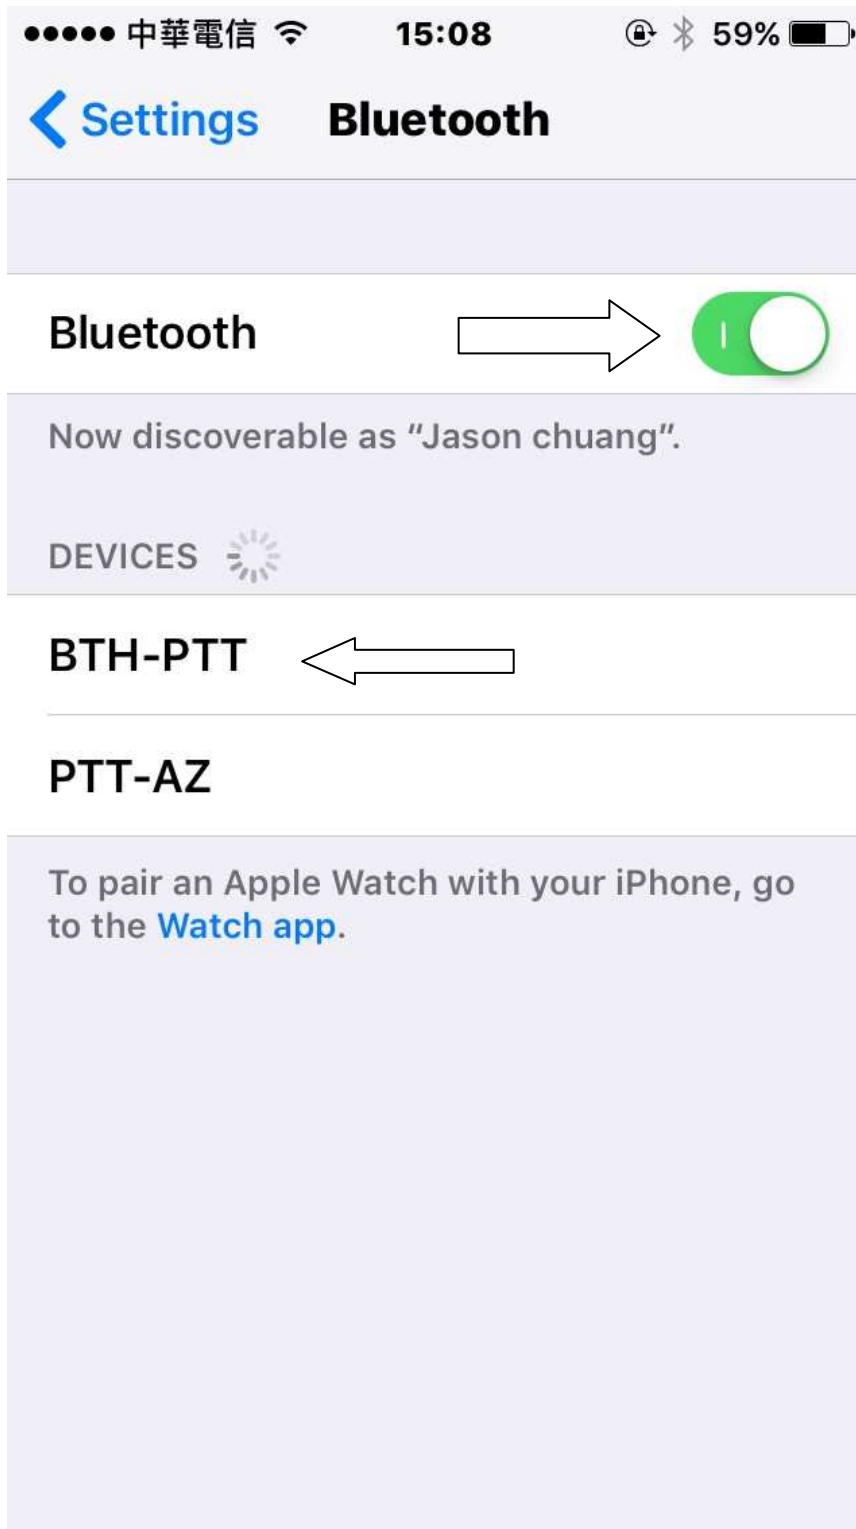
How to use BTH-300-R

PIO state	statement
Power S/W long held(>= 1sec)	Device on
Power S/W long held(>= 2.5sec)	Device off
Power S/W long press >6 sec	Enter pairing mode from power off
CELL short press	Answer incoming call Hang up outgoing call or active call Play/Pause
CELL long held(>=1sec)	Connect last HFP source(when HFP/HSP is connectable) Dial last number(when HFP is connected) Reject incoming call Transfer call(sink←→source)(when call is outgoing or active)
CELL double press	Voice dial(when HFP is connected)
VOL+ short press	Volume up
VOL+ long held(>=0.8sec)	Volume up continuously
VOL- short press	Volume down
VOL- long held(>=0.8sec)	Volume down continuously

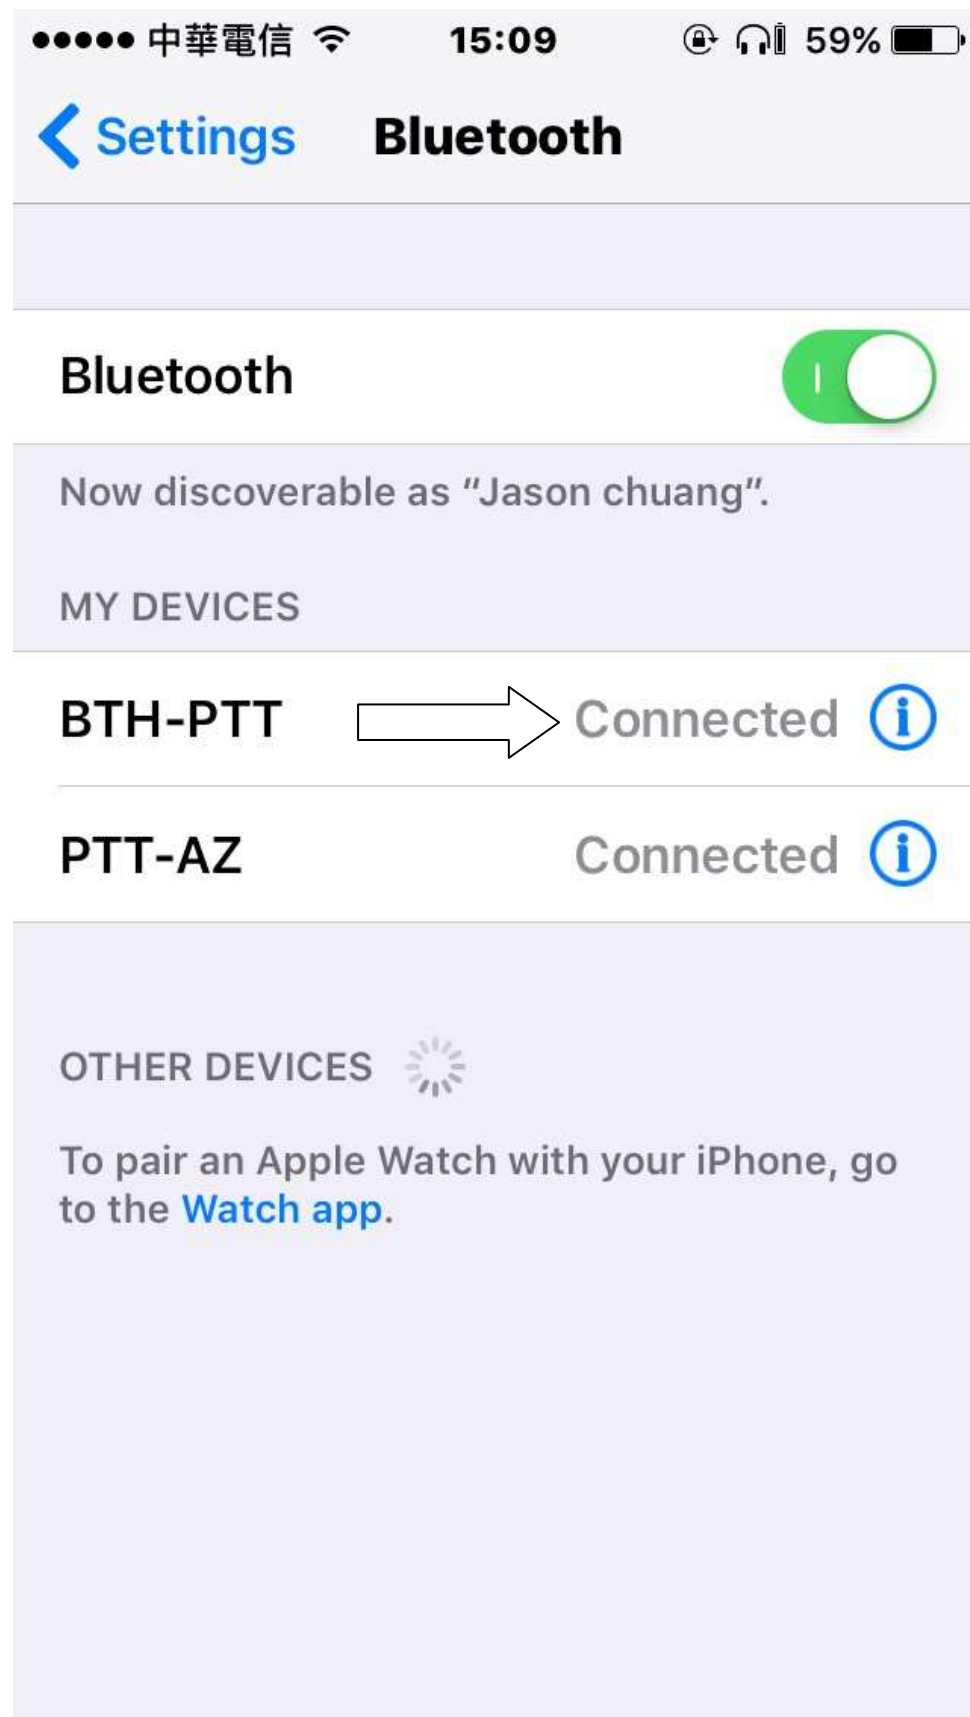# BTH-300R State and LED Flashing Pattern

LED state	statement
Blue led on : 2 sec , off : 1 sec , repeat	All profiles are standby but not connected with any Cellphone device yet.
Blue led flash every 2 sec	A2DP or HFP is connected.
Blue led flash twice every 2 sec	On A2DP streaming state.
Blue led on : 1 sec , off : 1 sec , repeat	On active call state.
Blue led and red led flash alternative repeat	Enter pairing mode.
Red led On	Battery Charging
Red led Off	Battery Full

iOS Setting
1. Go to "Setting" -> "Bluetooth", turn on Mobile phone's Bluetooth
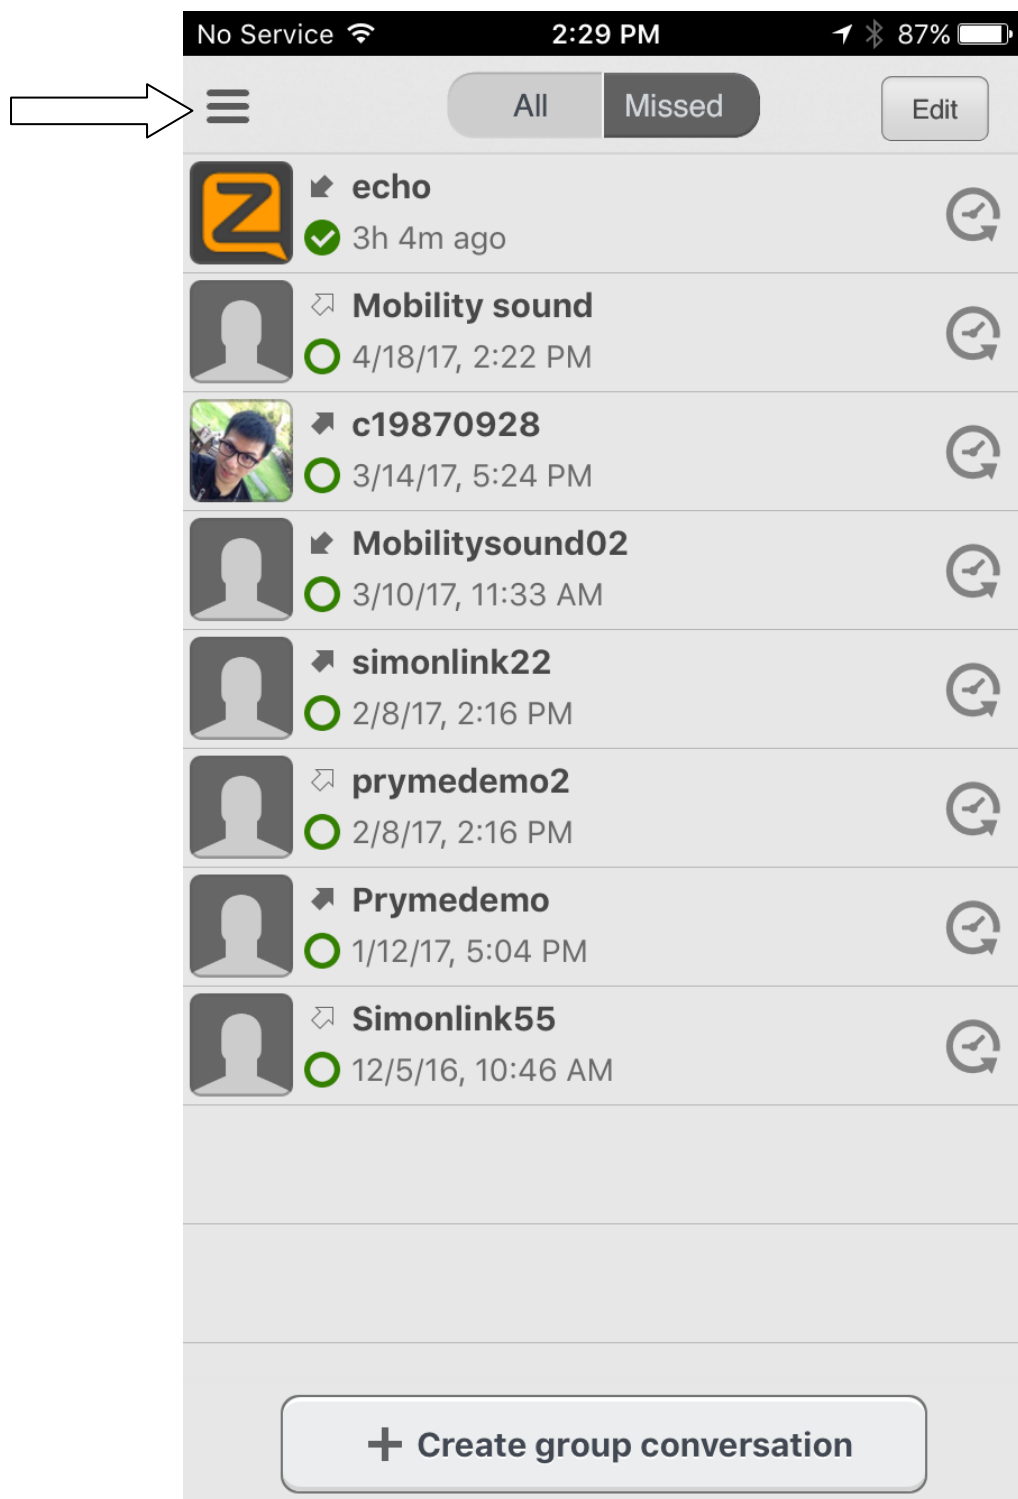   and BTH-300-R go to pairing mode.
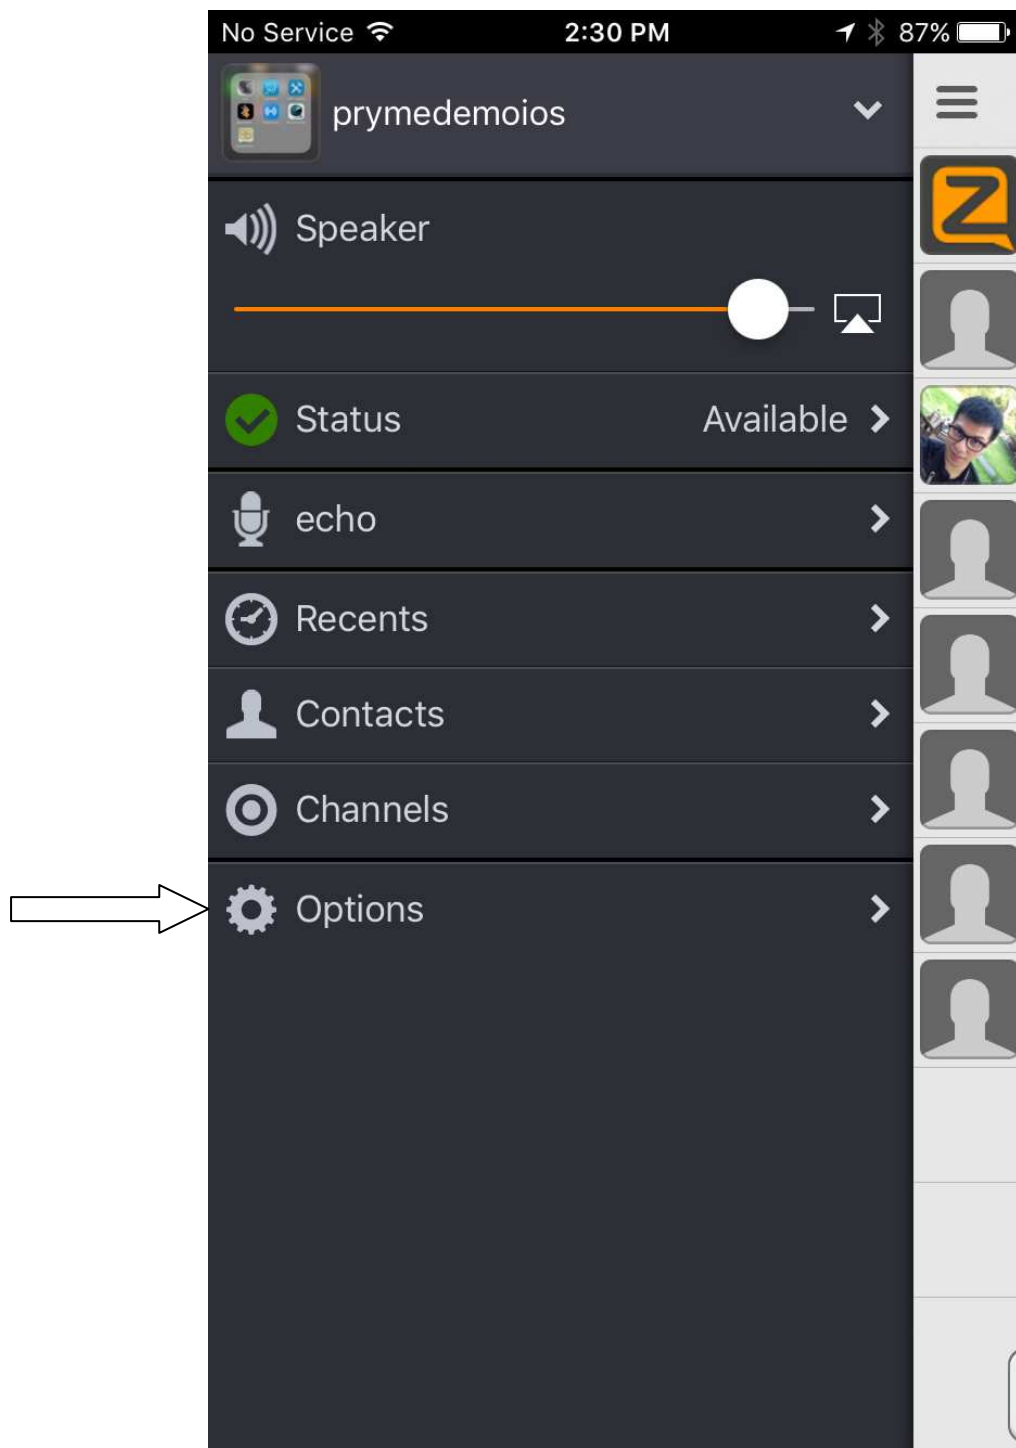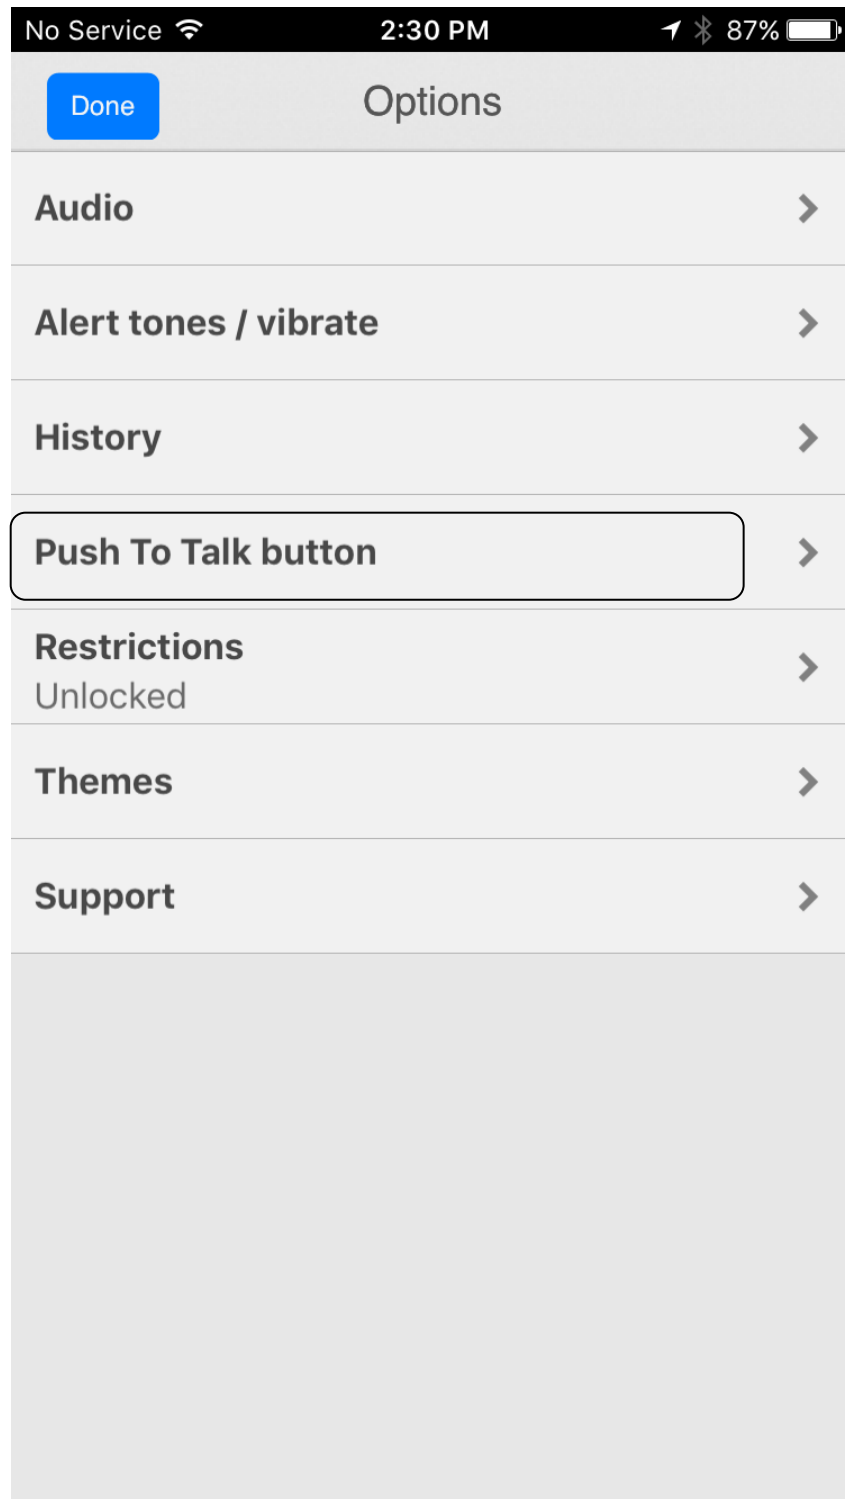   Press BTH-PTT to pair it.

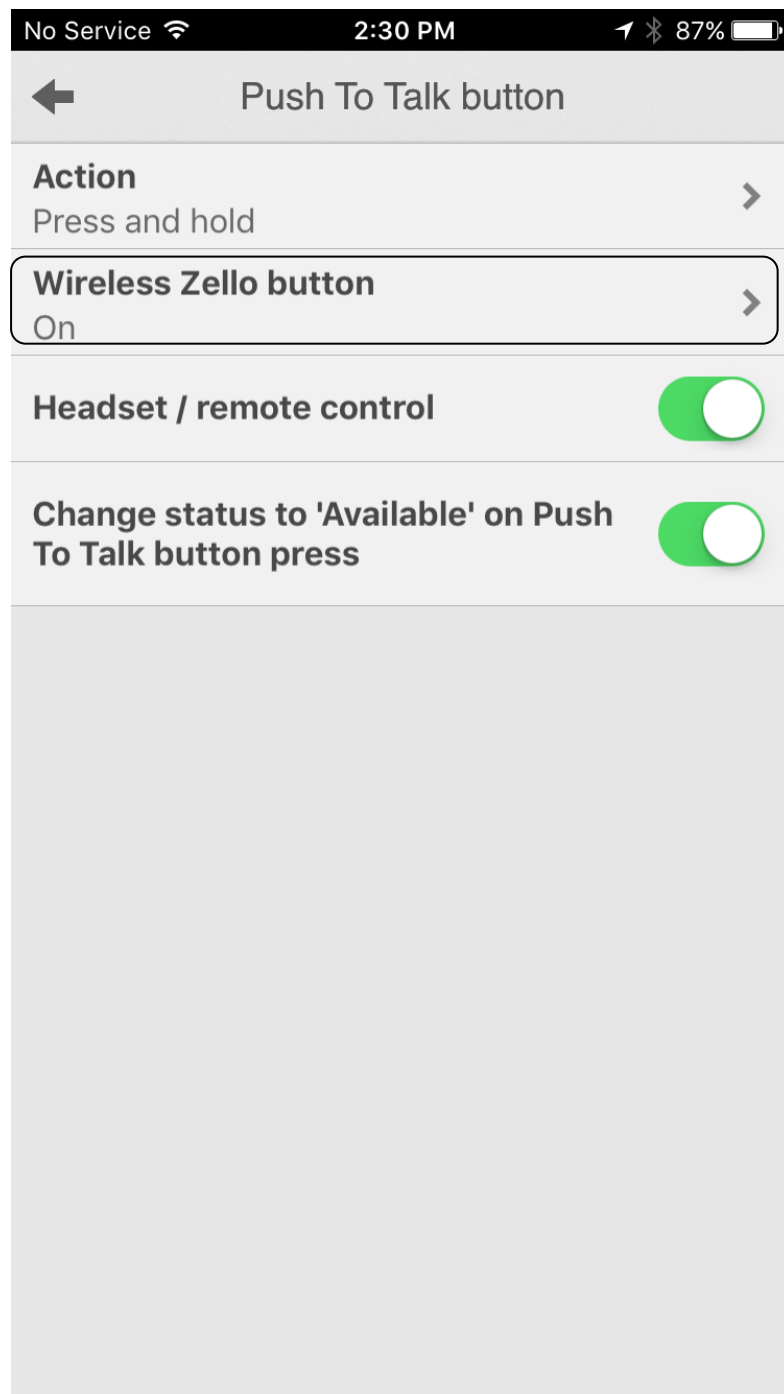1.a. Press BTH-PTT to connect it

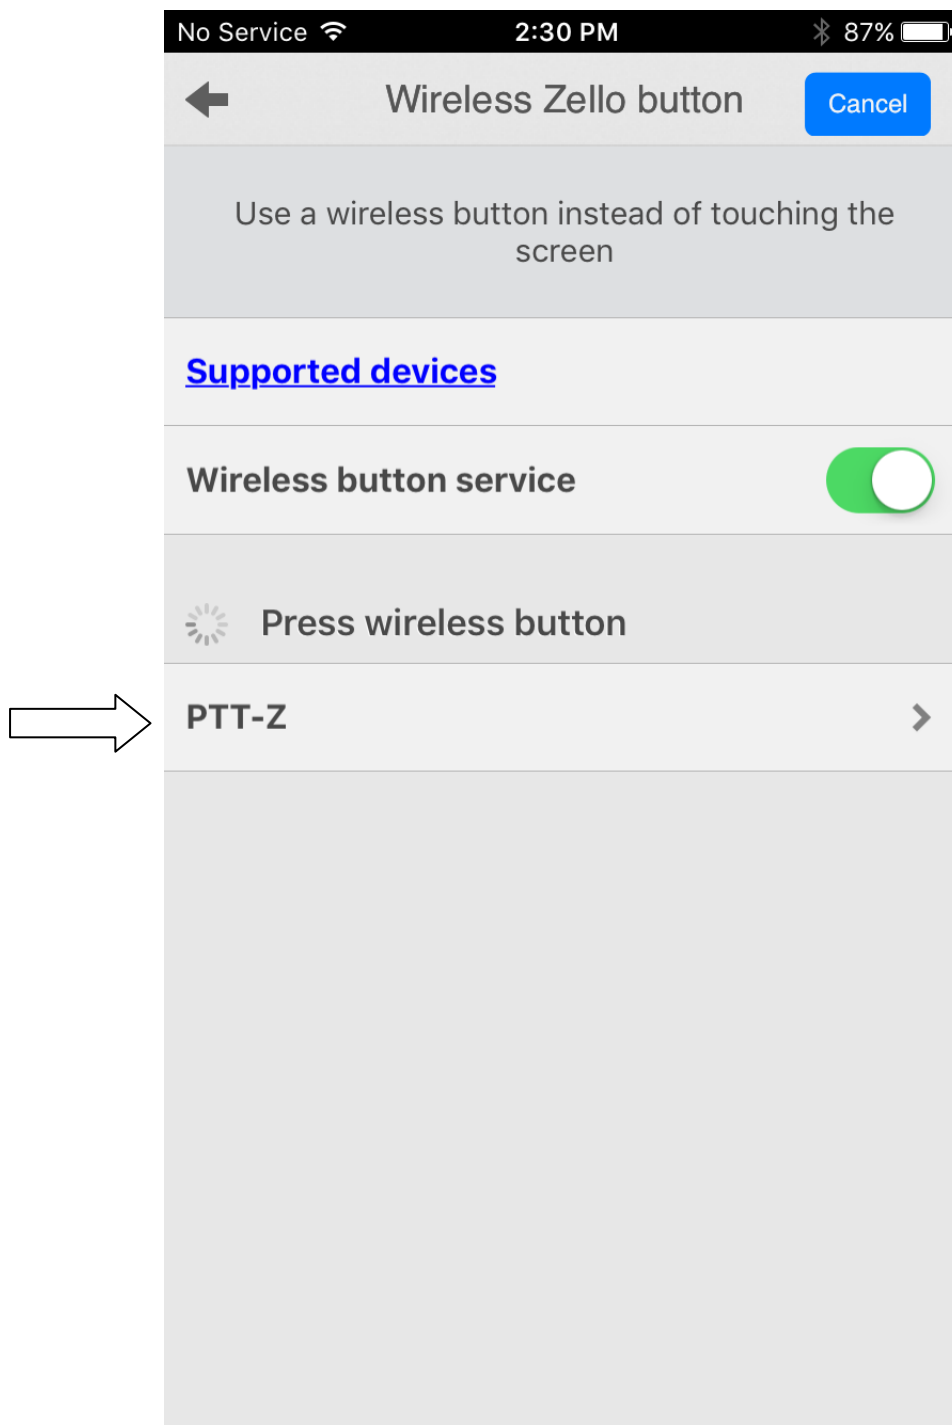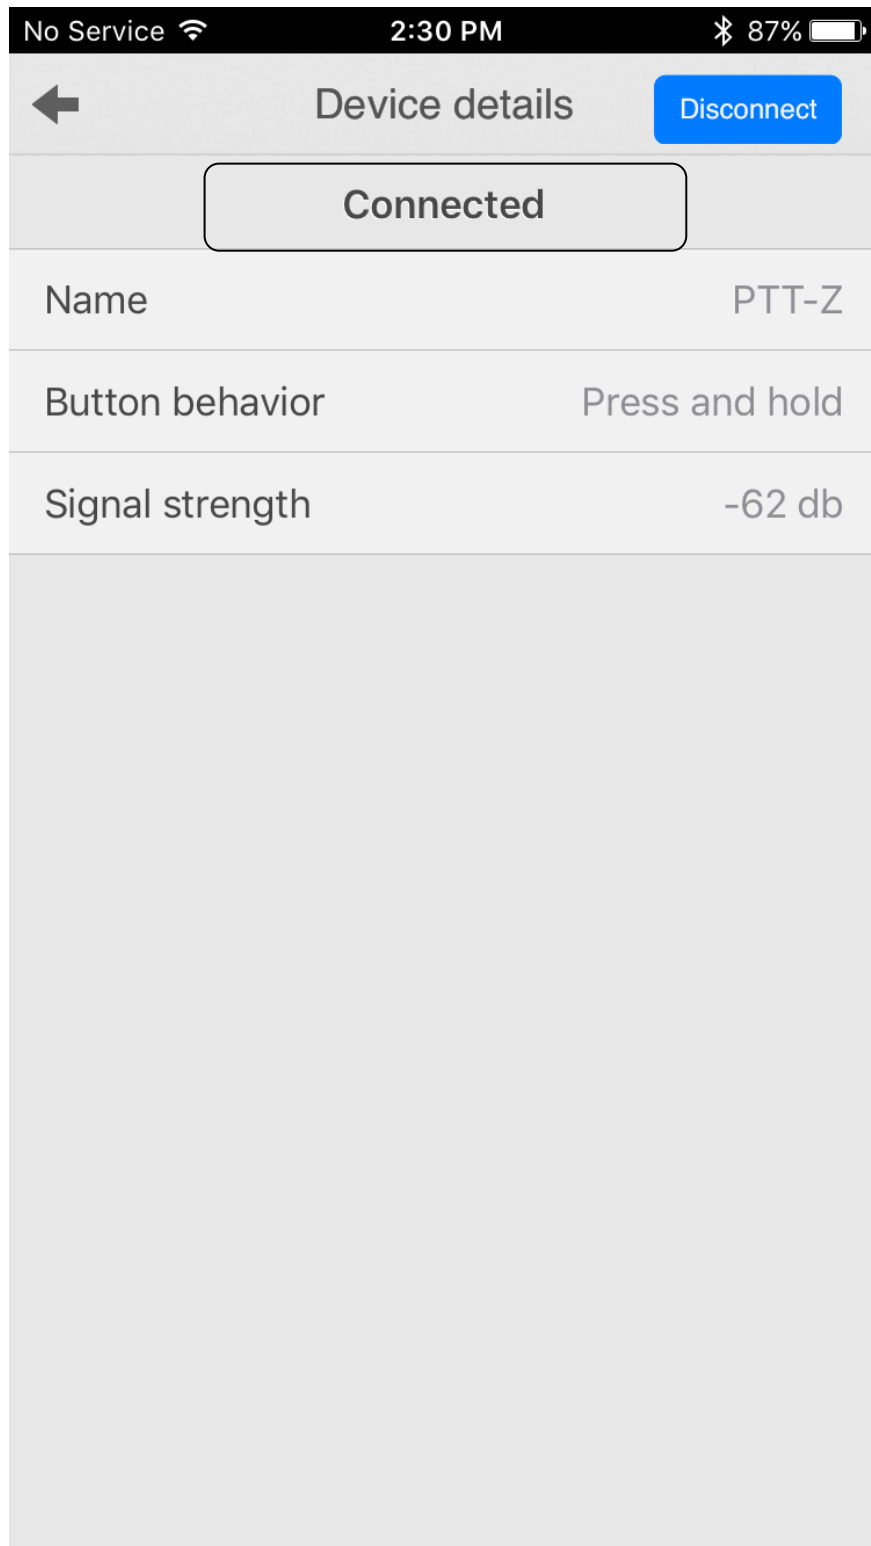2. Go to Zello and press "Menu"

3.Press "Options"

4.Press "Push To Talk button"

5.Press "Wireless Zello button"
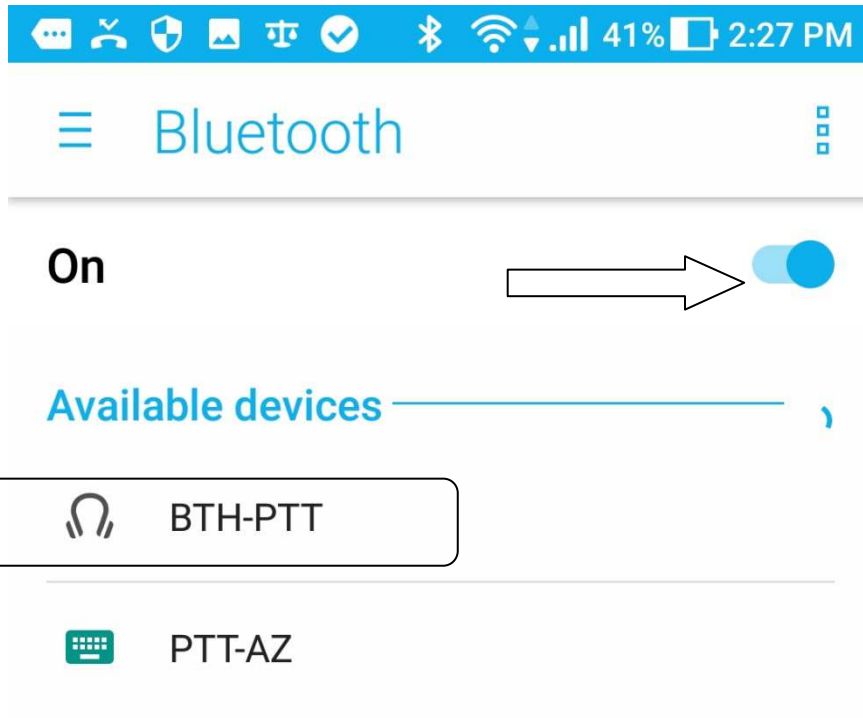
6.Press PTT button and it will show up "PTT-Z"

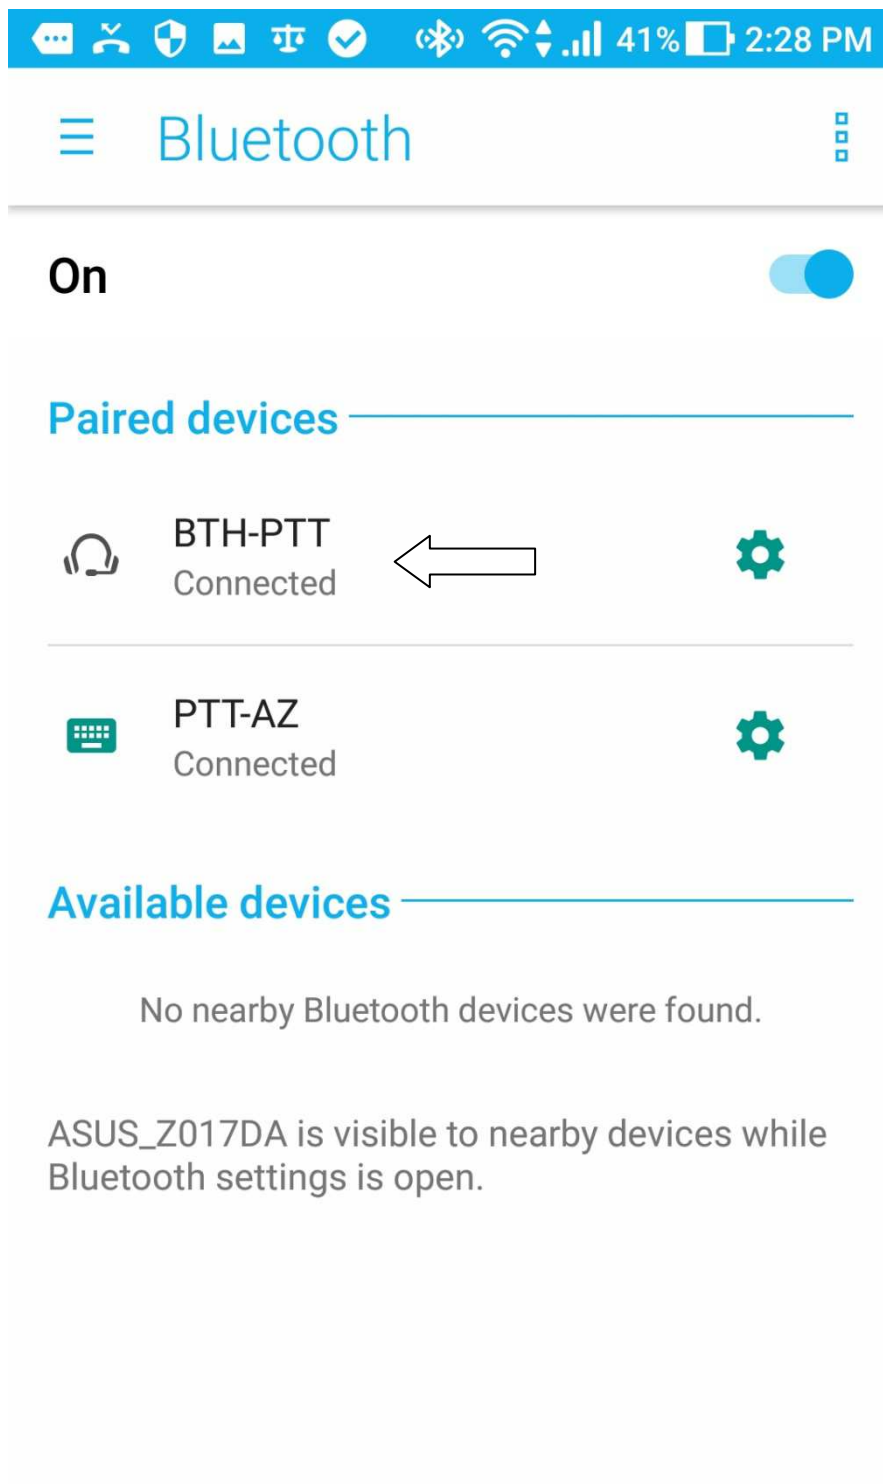10

7. It's ready to go. You can back to main page.

No Service 2:30 PM	87%
← Device details	Disconnect

Connected

Name	PTT-Z
Button behavior	Press and hold
Signal strength	-62 db

Android Setting

1. Go to "Setting" -> "Bluetooth", turn on Mobile phone's Bluetooth
   and BTH-300-R go to pairing mode.
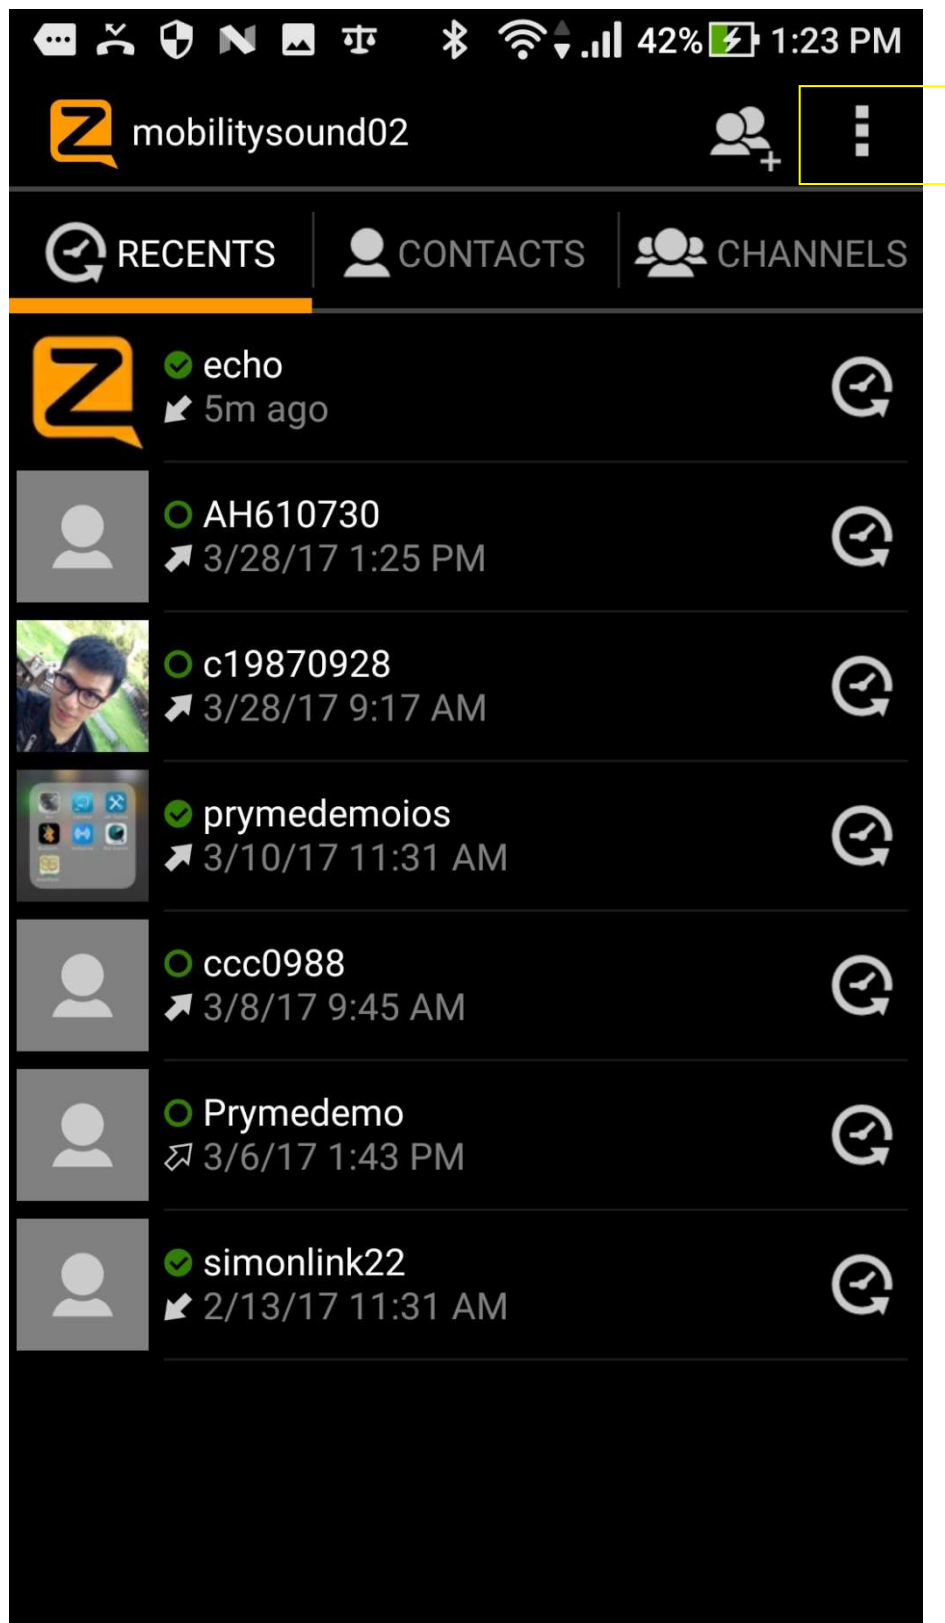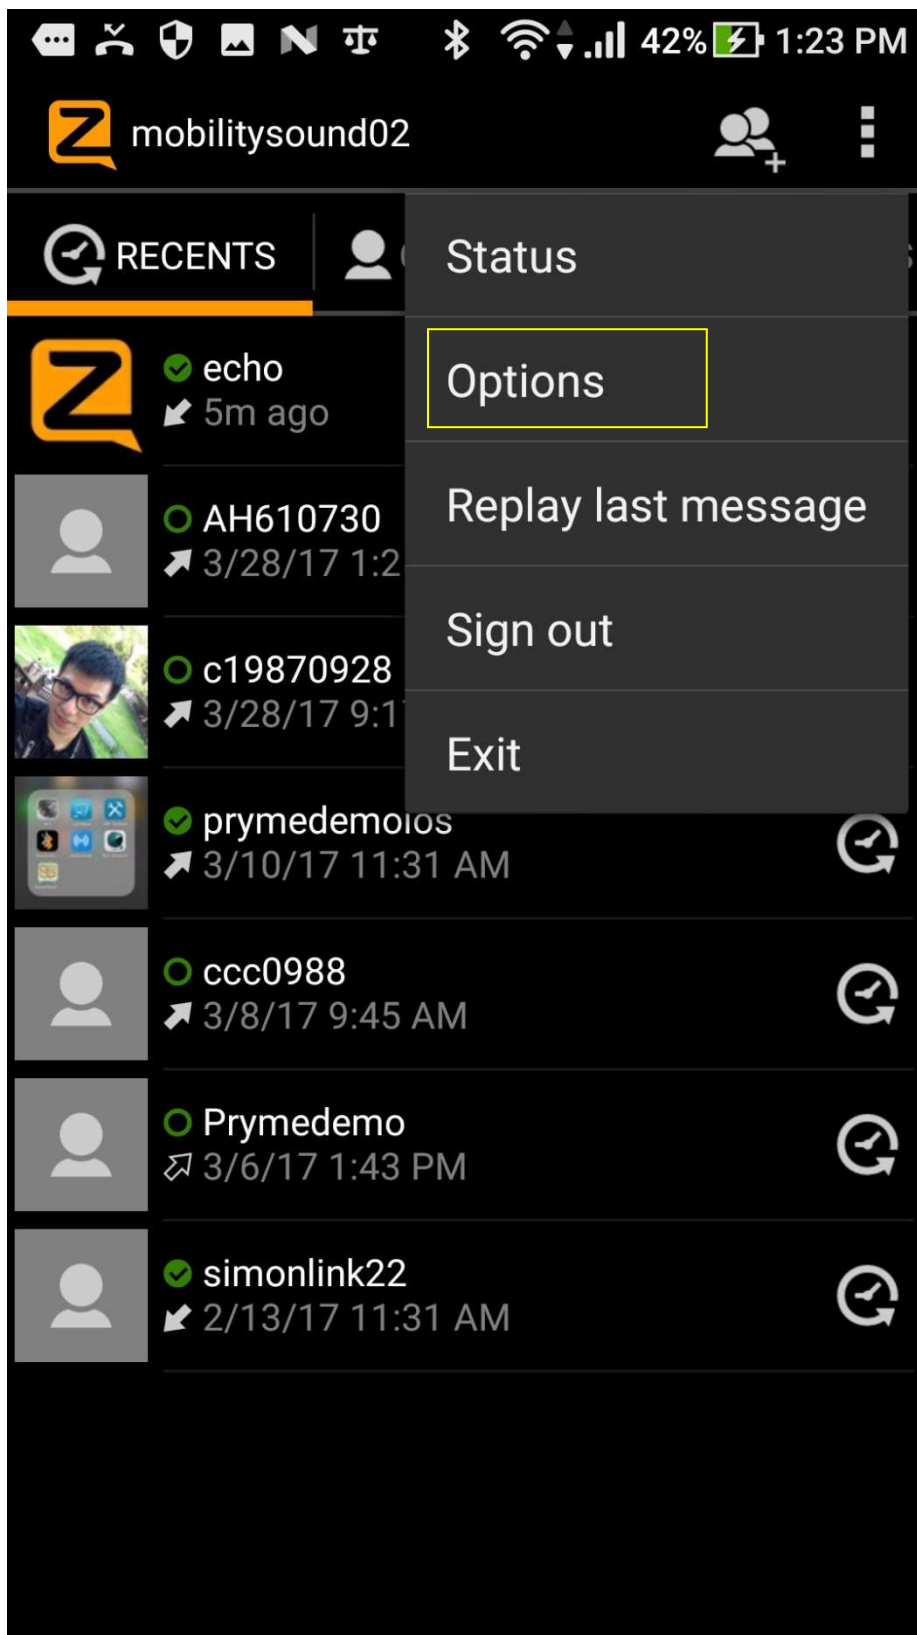   Mobile phone will discover "BTH-PTT", tap on it to connect
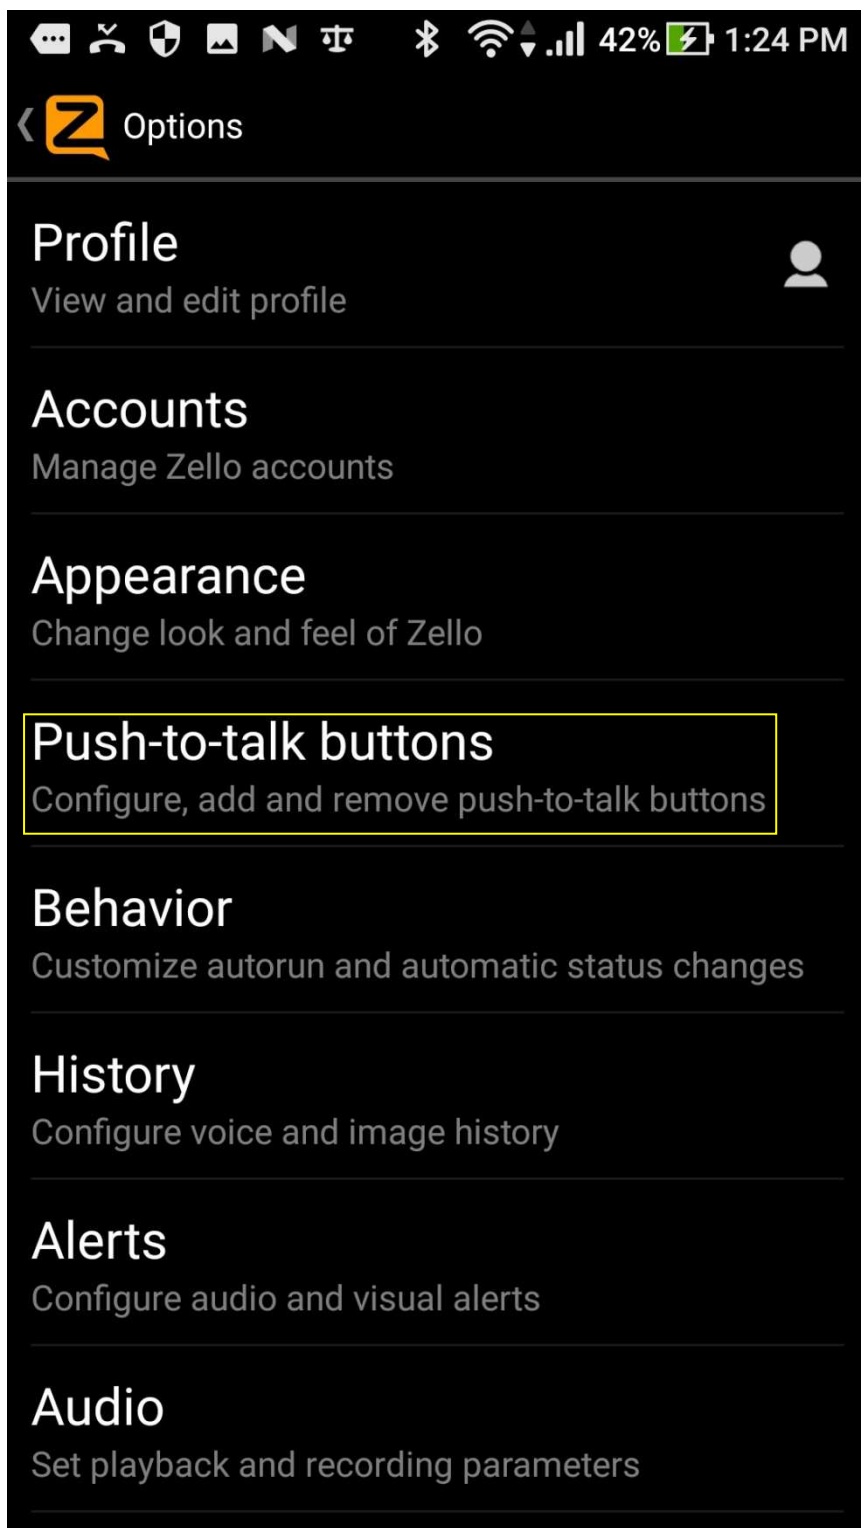
2. After both device connected.

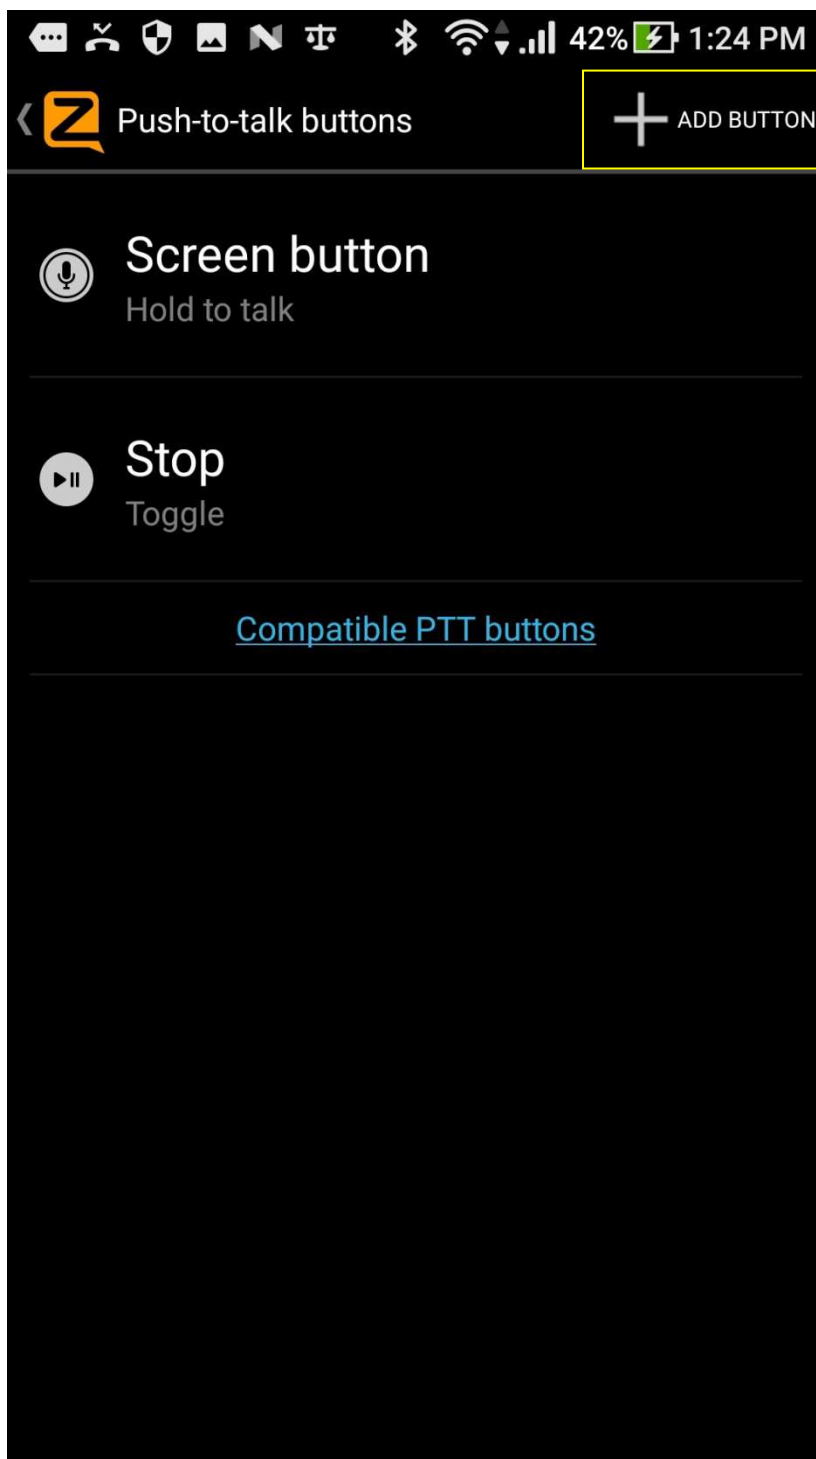3. After connection is established, execute Zello and tap the menu on the top right:
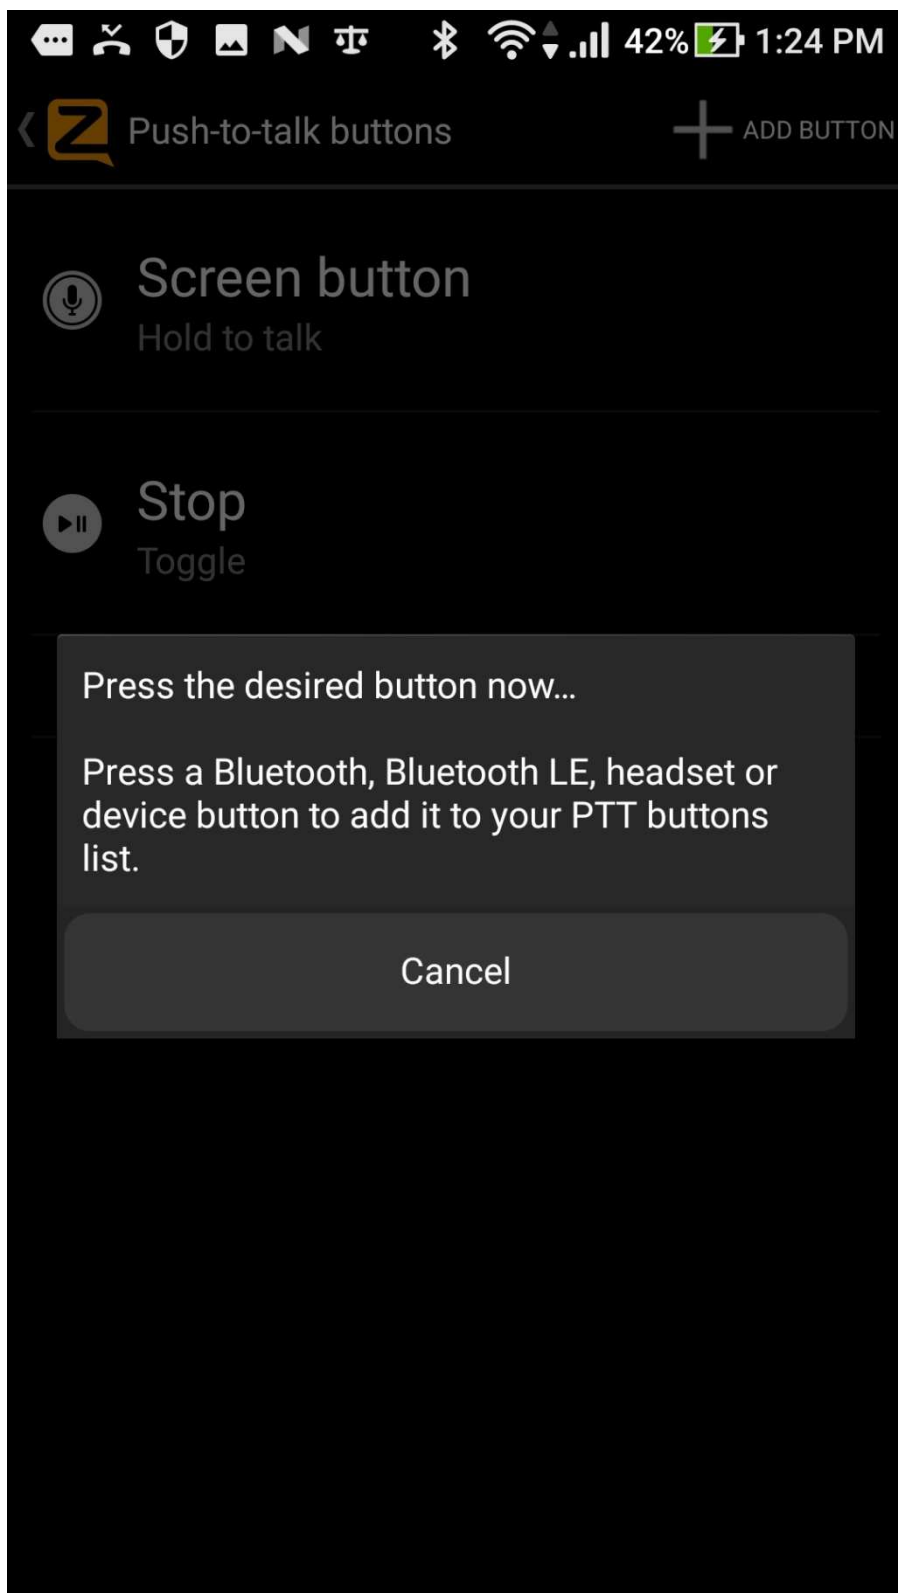
4.Then choose "Options"
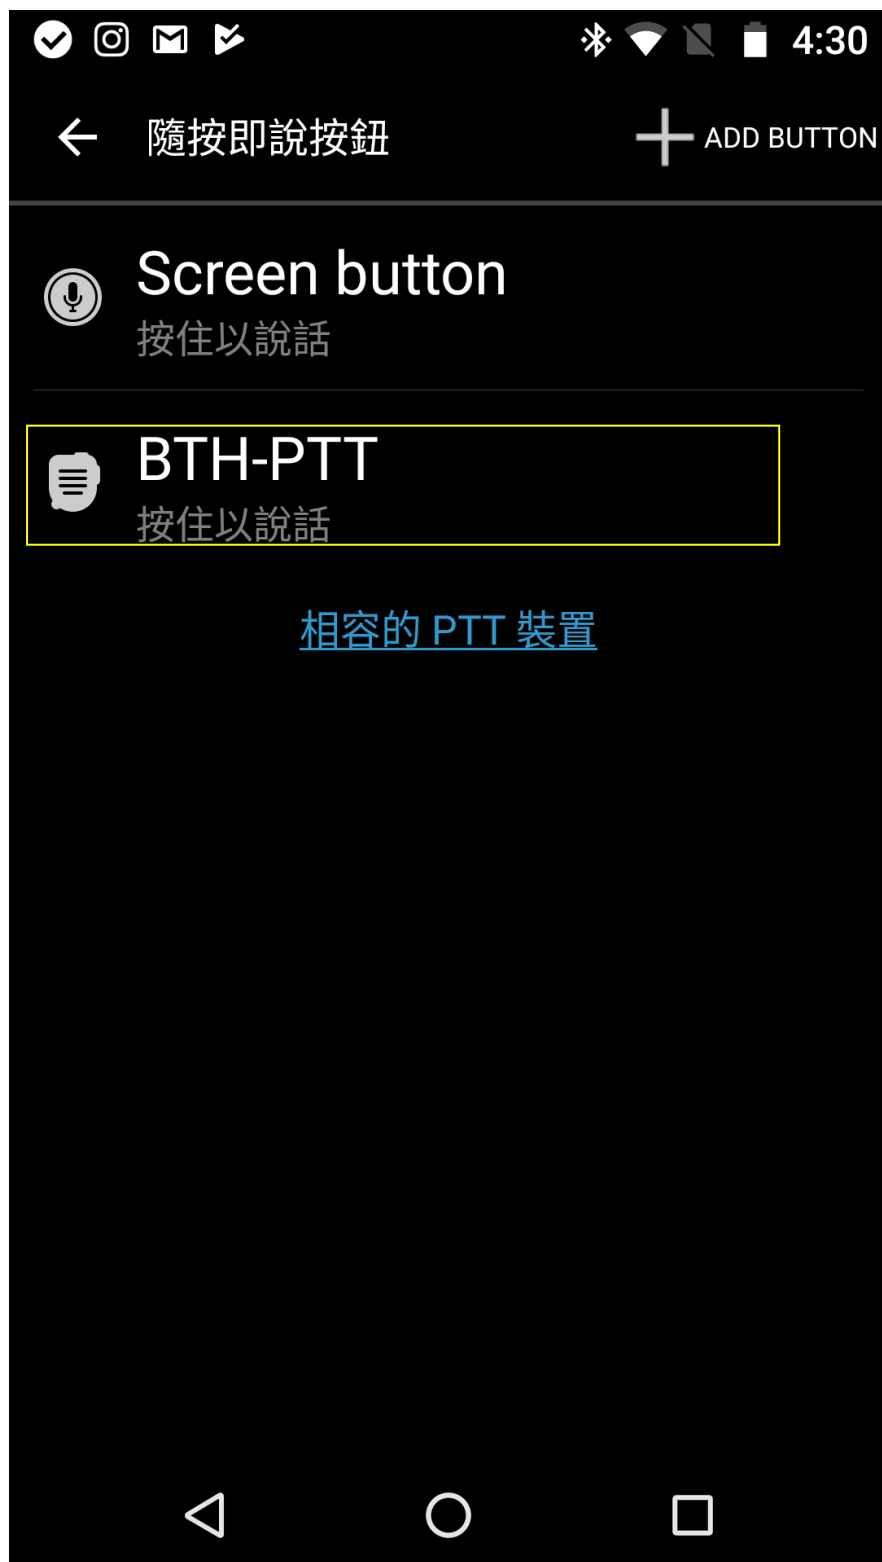
5.press "Push-to-Talk button"

6.press "+ADD Button"

7.Press your PTT button

8. You can see the "BTH-PTT"

8. Good to go